



IC-718 TX 1.8 - 30 MHz

Remove D-54 on the logic board, located behind the front panel.

D-54 is located in the upper left corner in the lower vertical group of diodes.

X

X

X


X


X


X

0-D54

X

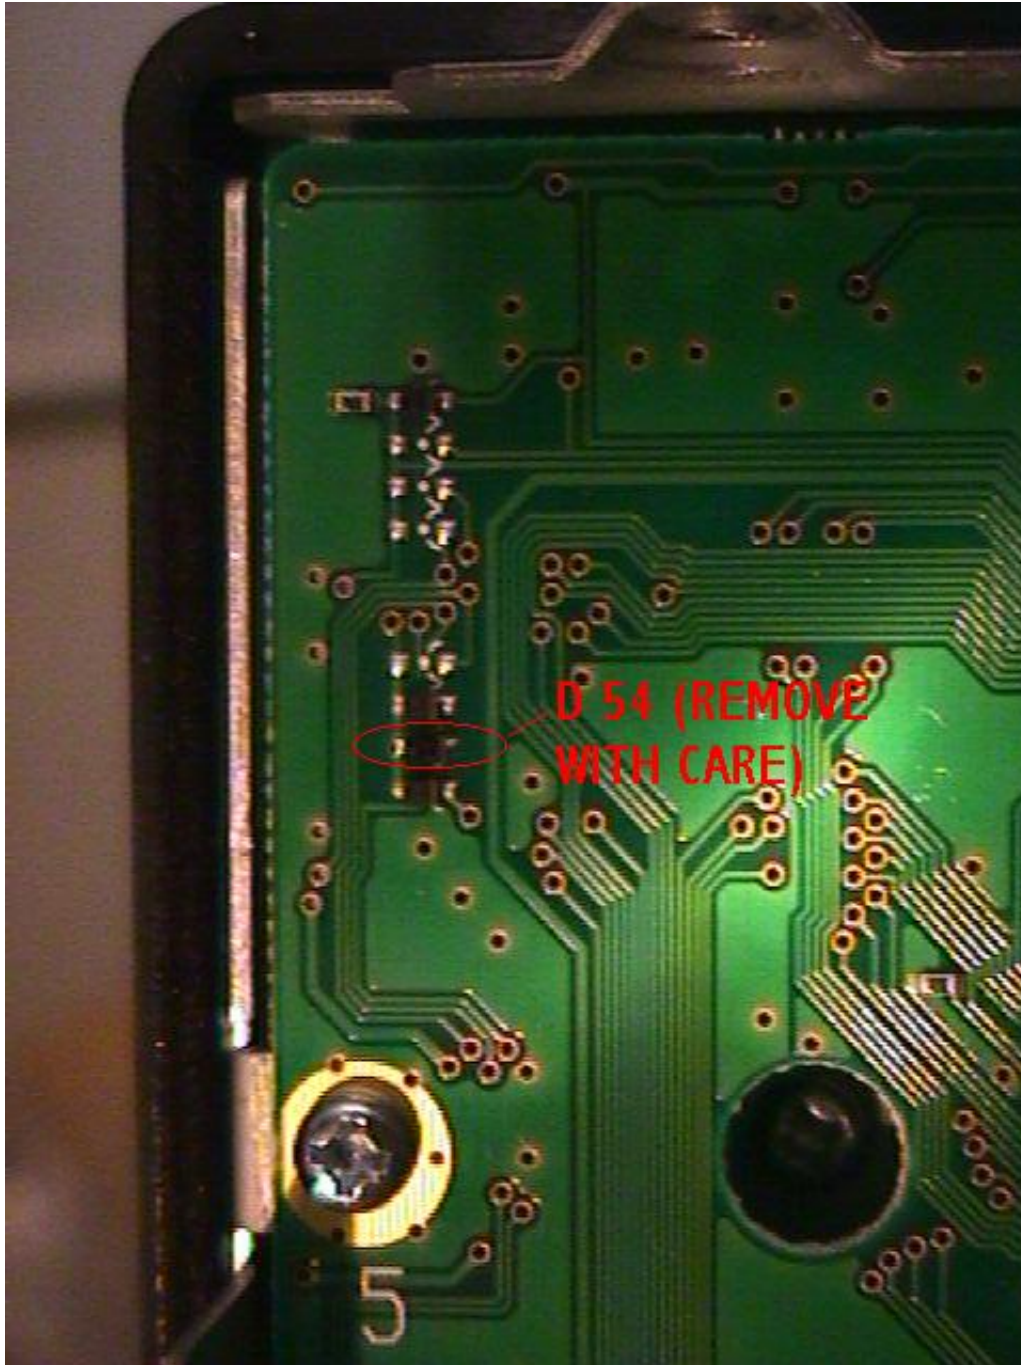

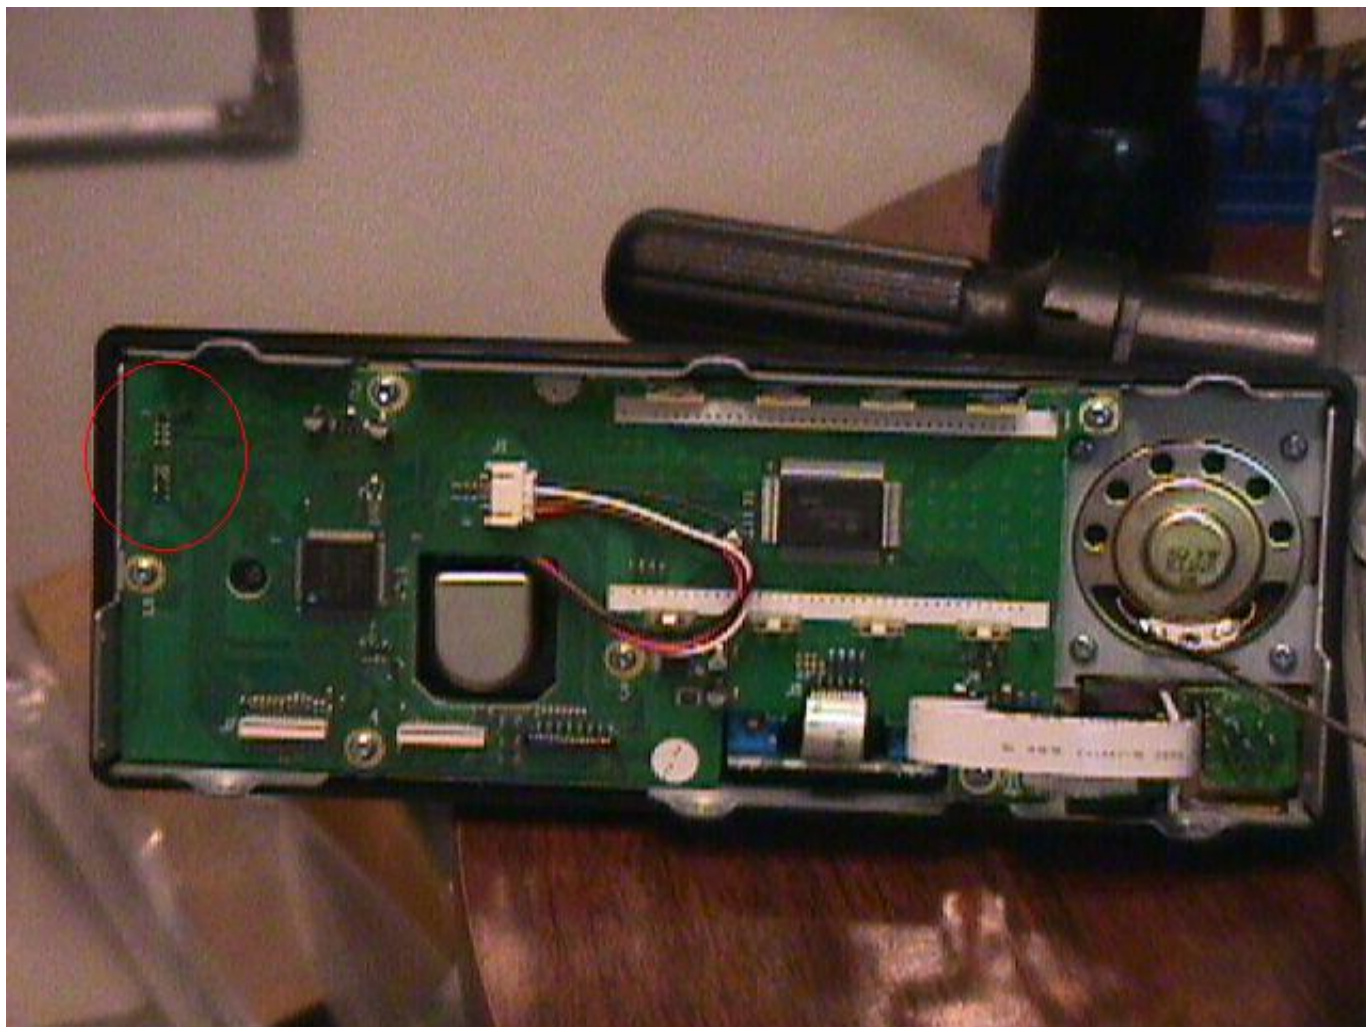

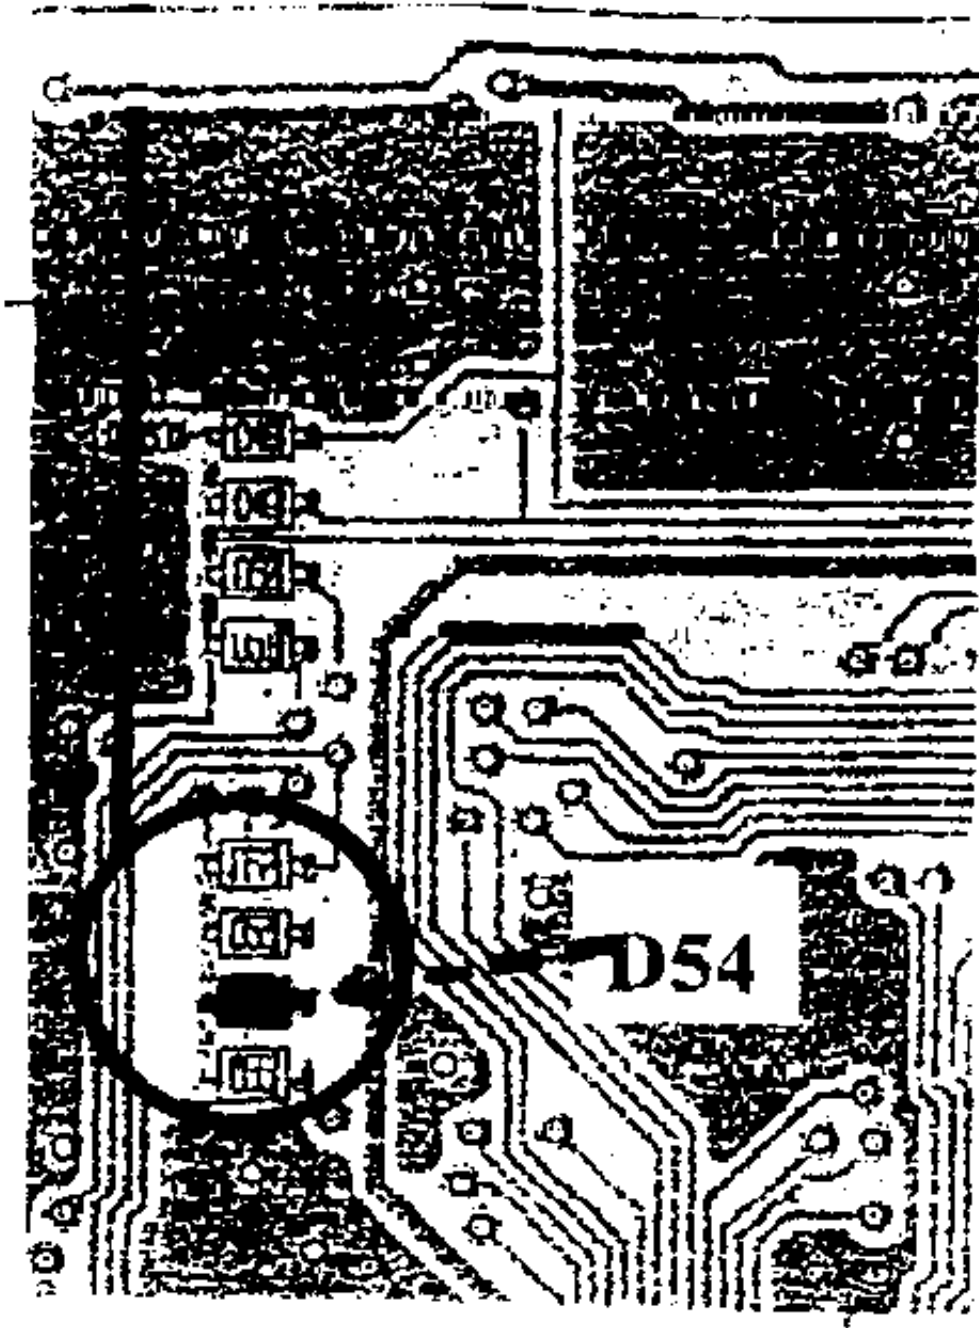

08-03-2008

Thanks to w6gq for these two pictures.

