



Yaesu MH-48 DTMF microphone mods

Remove JP5003, add Jumper JP5004 // leave JP5005 like picture in next page

→ LOCK switch lock all of the KEY including P1, P2, P3, P4 0 - 9 , A - D except PTT  
This will prevent accidentally change memory CH or change Memory / VFO mode, etc by pressing key A - D

















