



EL Driver PCB (EPT91V130Z)

IC 1 Pin Description

- | | |
|--------|--|
| 1 CHV | High-Voltage DC Input |
| 2 LDR | Booster Inductor Driver Output |
| 3 VSS | Ground |
| 4 OSC | Inductor and EL Driver Oscillator (Frequency Determined By R4) |
| 5 ENA | Enable (High: Enable Low: Disable) |
| 6 VDD | Supply |
| 7 OUT2 | Output 2 |
| 8 OUT1 | Output 1 |

Galaxy DX Radios
DX45MP, DX48T, DX93T, DX95T
EPT91V130Z EL Driver PCB

Copyright © 2006 CBTricks.com

All rights reserved

Rev. 1.1