



Band Switch
4 Position

Position
A = Band A & E
B = Band B & F
C = Band C & G
D = Band D & F

BAND PCB
EPT004410Z

Channel Sel. PCB
EPT055V30Z

NOTE:
The Display PCB
(EPT055V20Z) to the
front of the Channel Sel.
PCB.

EPT210014C
Frequency Counter PCB

Note: The wire colors used in this diagram are based on the radio used. Keep in mind that the color of the wires used could/will vary from radio to radio.

Wire Color Chart

Black	Light Green
Brown	Green
Red	Blue
Orange	Violet
Yellow	Gray
	White

Switch	Pos	Part #
BAND	2	EWSL31026K
R. B.	2	EWSL31026K
PA AM FM	3	EWSL31027K
NB	3	EWSL31027K
10kHz	2	EWSL31026K

Left	Right	
Left	Center	Right

View from bottom of Switch
with Detent Ball up