


(COMPONENT SIDE)

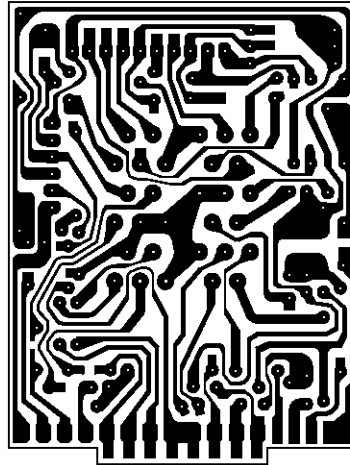

(COPPER SIDE)

## PART LIST:

ITEM	REFERENCE NUMBER	RANGER PART NUMBER	DESCRIPTION
1		EPT900030Z	
2	R315(BLUE)	RCP161024Z	1K OHM 1/16W P
3	R312,313,314,316-324(BLUE)	RCP161524Z	1.5K OHM 1/16W P
3	J303,304,305,306	WX01070705	JUMPER WIRE 7x5x7
4	J308	WX01070708	JUMPER WIRE 7x8x7
5	J301,J302,D311,D312,D313,D314,D315,D316,D323,D324,D325,D326	WX01070710	JUMPER WIRE 7x10x7
6	J307	EX07N48209	PCB CONNECTOR/S 10P
7	ROTARY SWITCH	EWRT32000S	GPS-0501

## SuperStar 158 EDX ROTARY SWITCH PCB